



## 1. NOZZLE

Your JETCLEANER is connected to dry, filtered (5 $\mu$ ) air (6-7 bar). The machine is opened and the desired nozzle is inserted.



## 2. PROJECTILE

A new and undamaged cleaning projectile is inserted into the back part of the nozzle and the gun is closed.



## 3. LAUNCH

The nozzle is pressed against one end of the hose/tube to be cleaned and the trigger is pulled until the cleaning projectile has passed the hose/tube.



## 4. DONE

The cleaning projectile along with dirt and particles ends up in the collector and your hose/tube is clean.